 


≡ Custom Cutting System ≡

This classic scrapbooking system has been around for decades. You can use three different blades to make up to 18 different size shapes with each pattern kit. Each blade features a 360-degree rotation, making it simple to cut a full circle without ever twisting your hand or moving an elbow.

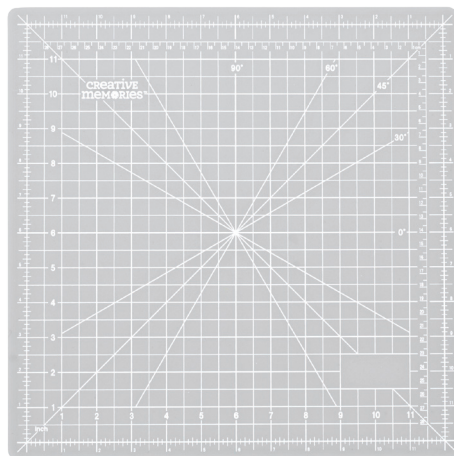

13x13 CCS Mat
#657144




Red Blade
1/16" cut | #634368




Green Blade
3/16" cut | #634369




Blue Blade
5/16" cut | #634380

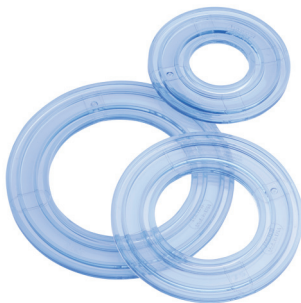 


Circle CCS Patterns
#624387

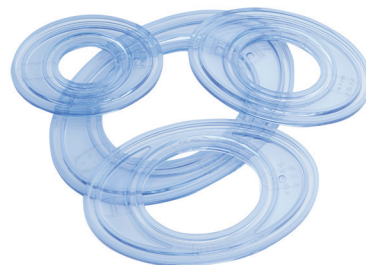 


Oval CCS Patterns
#624389

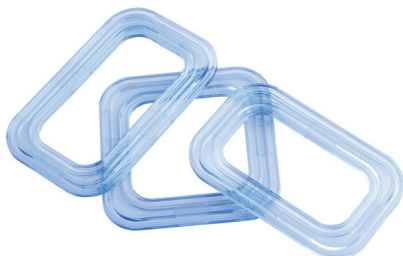 

Rectangle CCS Patterns
#655551

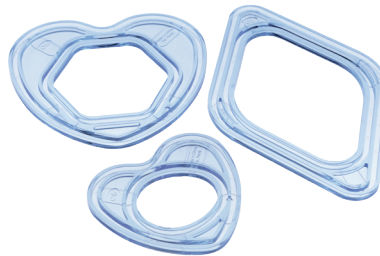 


Gemstone CCS Patterns
#655843

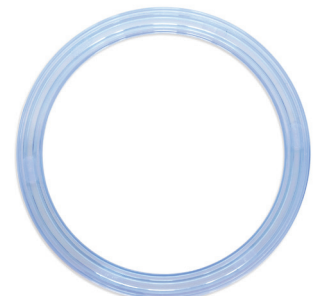 

Jumbo Circle CCS Pattern
#642039

 HOW TO USE THE CUSTOM CUTTING SYSTEM

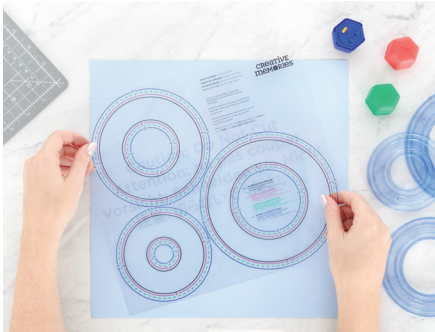

Step 1

Determine which Custom Cutting System pattern and blade (Red, Green or Blue) to use by placing the Sizing Template on top of your photo or paper. Take note of which pattern and blade will work then remove it. Do not cut through the Sizing Template.



Step 2

Place photograph or paper on 13x13 Custom Cutting System Mat, then place the chosen Custom Cutting System pattern on top of it. Double-check the placement by placing the Sizing Template back on top of the pattern and adjust as needed before making the cut.



Step 3

Place the pegs of the blade into the track on the outside edge of the pattern. Hold the pattern firmly with one hand and press the blade down into the paper or photo. Then release the pressure on the blade slightly and begin to gently guide the blade around the pattern.



 
Step 4

Apply even pressure to the blade as you slowly move it around the pattern. If you need to change hand positions, make sure one always remains on the pattern to prevent it from moving.



Step 5

Before removing the blade or moving the pattern, check to see that the cut has gone completely through the paper and around the pattern. If not, simply repeat the cut. When finished, remove the outer photo or paper first, then remove the pattern.

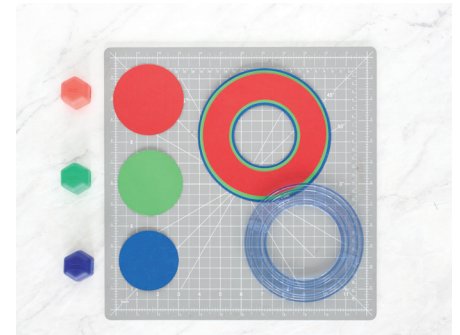

Tips

The Red Blade cuts the closest at one-sixteenth of an inch from the edge. The Green Blade cuts three-sixteenths of an inch from the edge. The Blue Blade cuts five-sixteenths of an inch from the edge.